




PREPARATION AND APPLICATION PROCEDURE

ASBESTOS COVERING

PREPARATION	FINISH
<p>Procedure:</p> <ul style="list-style-type: none">- Rinse well with a pressure washer.- Clean with TexNov Surface Preparer.- Let act for 15 minutes by keeping the surface wet.- Rinse the surface well.- Let the surface dry over a 48-hour period of good weather.	<p>After preparing the surface:</p> <p>Procedure:</p> <ul style="list-style-type: none">- Apply two coats of TexNov Acrylic Coating. Use a brush or roller with 10 mm bristles (24 hours between each coat).- Let the surface dry for 24 hours.

Maintenance: Clean the surface with **TexNov Surface Preparer** (6 water / 1 Preparer).

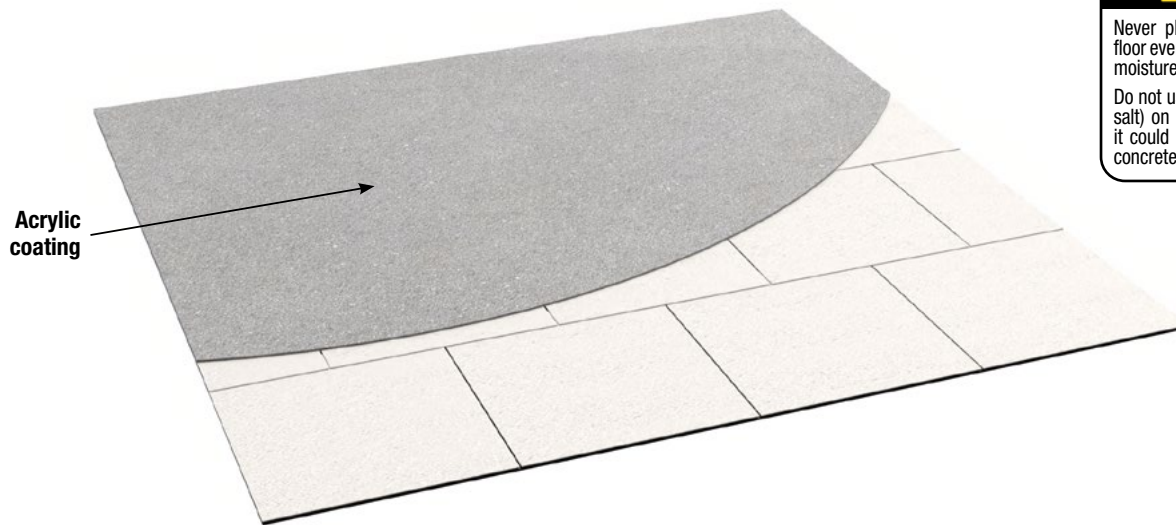

CAUTION

Never place rubber mats on an acrylic floor even if there is a sealer. Accumulated moisture could affect the acrylic coating.

Do not use magnesium chloride (de-icing salt) on surfaces with acrylic coating as it could damage your surfaces including concrete.