


## PREPARATION AND APPLICATION PROCEDURE STAMPED CONCRETE

PREPARATION	FINISH	SEALANT
Procedure:	- Not recommended	Procedure:
- If your concrete is covered with paint or sealer, remove the paint		- Apply 2 coats of <i>TexNov Met-30</i> Sealant
with a sandblaster, diamond grinder, or other suitable means.		(24h between each coat).
<ul> <li>Clean the surface with a 2500-pound water pressure washer with rotating jet, gasoline engine. (Available in tool rental</li> </ul>		- Let the surface dry for 24 hours before stepping on it.
centers.)		Procedure for SUPERIOR protection:
- Dilute the TexNov Surface Cleaner.		- Apply 2 coats of Sealant <i>Met-30</i> (24h between each layer)
- If the concrete surface is dry, wet the surface before applying		or <i>TexNov Met-HD</i> (48h between each layer).
TexNov Surface Cleaner. With a sprayer let stand 10 to 15		- Let the surface dry for 24 hours or 48 hours of good
minutes, brush as needed		weather before stepping on it.
- Rinse thoroughly with a pressure washer.		
- Let the surface dry for 48 hours of good weather.		Important: For the passage and / or vehicle parking a wall
- Repair cracks or level the surface with TexNov All Purpose		of 30 days will be necessary.
Polymer.		
- Allow the surface to dry for 24 to 48 hours in good weather.		

Maintenance: Clean the surface with the TexNov Surface Preparer (6water / 1 Preparer). Let dry and add a coat of Sealant Met-30 or Met-HD every 3 years or as needed; This should enable you to keep your surface in good condition.

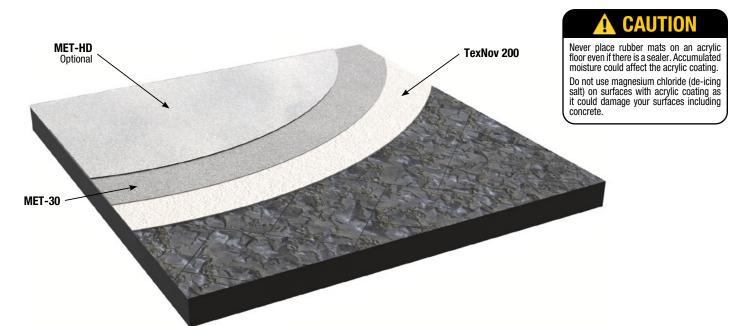



839 Joseph-Louis-Mathieu, Sherbrooke J1R 0X3 www.texnov.com - info@texnov.com **1 877 316-6388**  The application instructions and performance characteristics are based on information we believe to be reliable. They are offered to the best of our knowledge, but without guarantee, as conditions and methods of use of our products are beyond our control.