




PREPARATION AND APPLICATION PROCEDURE

VINYL COVERING

PREPARATION	FINISH
Procedure: <ul style="list-style-type: none"> - Rinse the surface thoroughly with a pressure washer. - Apply TexNov Surface Preparer (4 water / 1 concentrate). - Vigorously brush the surface and let sit for 15 minutes keeping the surface wet. - Rinse the surface thoroughly with a pressure washer. - Let the surface dry prior to applying the finish coating 	Procedure: <ul style="list-style-type: none"> - In warm weather dilute with water (50 ml/liter) for ease of application. - <u>The temperature of the surface should not exceed 30 ° C at the application.</u> - Apply two coats of TexNov Acrylic Coating. Use a brush or roller with 10 mm bristles (24 hours between each coat). - Let the surface dry for 24 hours. Important: <ul style="list-style-type: none"> - Some plastics made from recycled materials are not compatible. - We recommend that you install a pale color to decrease expansion of the coating.

Maintenance: Clean the surface with **TexNov Surface Preparer** (6 water / 1 Preparer).

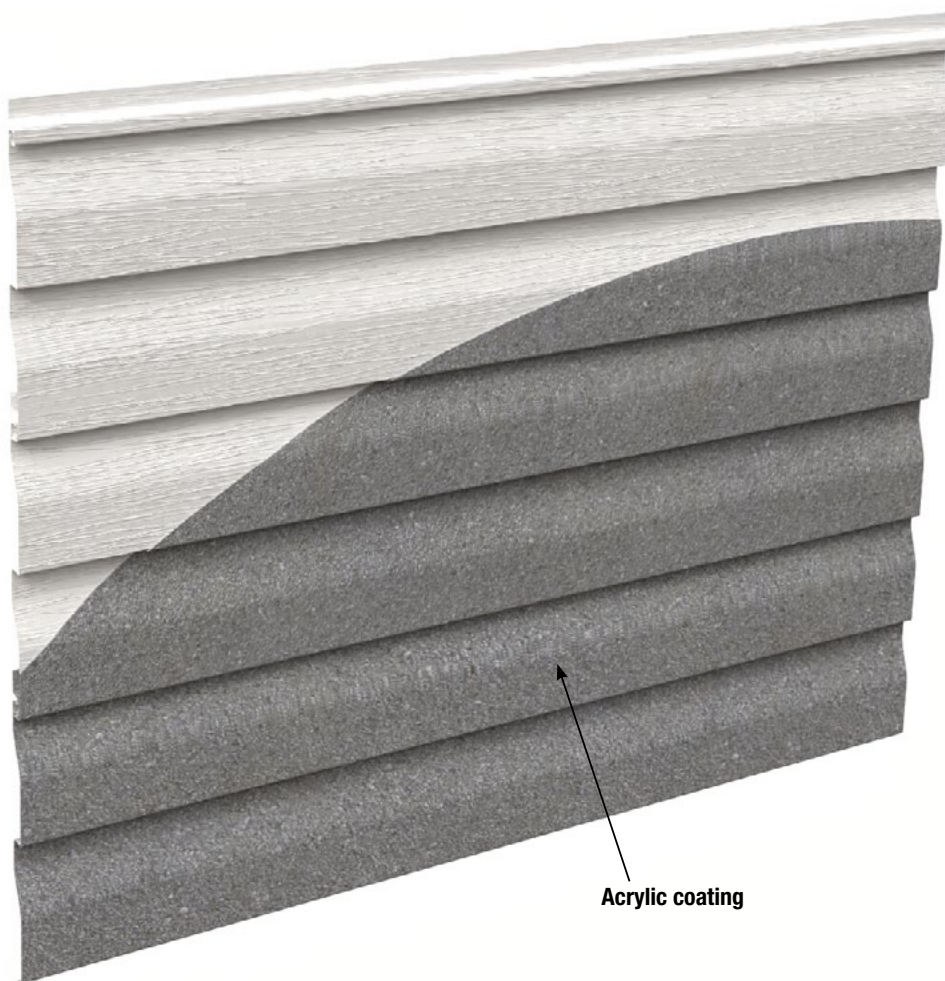

Acrylic coating