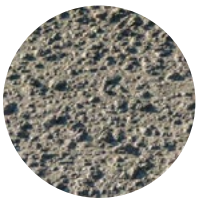

PREPARATION AND APPLICATION PROCEDURE

FRESHLY POURED CONCRETE

SEALANT

For a freshly poured concrete floor done on the same day.

Procedure: Once concrete surface is dry (as soon as you can walk on it). Apply the ***TexNov Met-30*** Sealant as a curing agent. Use a paintbrush or a roller with 10 mm bristles or a sprayer.

⚠ CAUTION

Never place rubber mats on an acrylic floor even if there is a sealer. Accumulated moisture could affect the acrylic coating.

Do not use magnesium chloride (de-icing salt) on surfaces with acrylic coating as it could damage your surfaces including concrete.

OPEN QUANTITY CALCULATOR

TexNov
839 Joseph-Louis-Mathieu, Sherbrooke J1R 0X3
www.texnov.com - info@texnov.com
1 877 316-6388

The application instructions and performance characteristics are based on information we believe to be reliable. They are offered to the best of our knowledge, but without guarantee, as conditions and methods of use of our products are beyond our control.