PREPARATION AND APPLICATION PROCEDURE

STONE EFFECT COATING

PREPARATION	FINISH COATING	SEALANT
Procedure: - Rinse the surface well with a pressure washer. - Apply ***TexNov Surface Preparer*** according to the dilution table. - Brush the surface vigorously and leave for 15 minutes. - Rinse the surface thoroughly with a pressure washer. - Allow the surface to dry for 24 hours in good weather before applying the finishing coat.	**Procedure:** - Apply 2 coats of ***TexNov Acrylic Coating***, using a brush or roller with 10 mm bristles. - Allow 24 hours drying time between coats. - Allow the surface to dry for 24 hours before applying the sealant.	**Procedure:** - Apply 2 coats of ***Met-30 TexNov sealer***, using a brush or roller with 10 mm bristles. - Allow 24 hours of good weather to dry between coats. - Let the surface dry for 24 hours.

Maintenance: *Clean the surface with TexNov Surface Preparer by diluting 9 parts of water and 1 part of Preparer. Let dry and add a coat of Met-30 Sealer every 3 years or as needed, which should allow you to keep your surface in good condition*

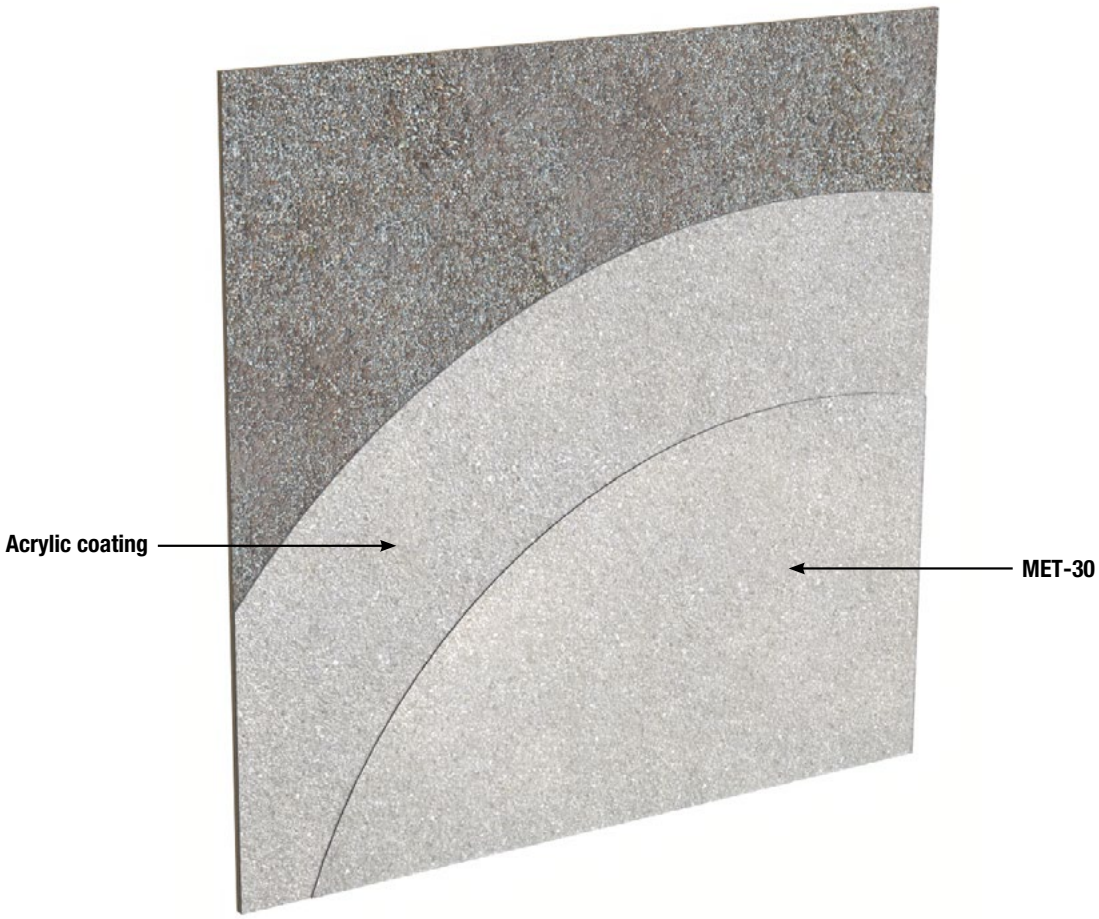

OPEN QUANTITY CALCULATOR

TexNov
839 Joseph-Louis-Mathieu, Sherbrooke J1R 0X3
www.texnov.com - info@texnov.com
1 877 316-6388

The application instructions and performance characteristics are based on information we believe to be reliable. They are offered to the best of our knowledge, but without guarantee, as conditions and methods of use of our products are beyond our control.